LinknLink

eMotion Air

Smart Presence Sensor

Quick Setup Guide

Guides Online | Download App | YouTube | FaceBook

LINKNLINK PTY LTD

Email: support@linklink-iot.com

Website: www.linknlink.com

Address: Chatswood West, Sydney, 2067 New South Wales, Australia

For any questions or suggestions feel free to contact us
Visit www.linknlink.com > Support > Help Center for full instructions

1 OVERVIEW

Package contents:

eMotion Air × 1, Mounting bracket × 1,
Mounting sticker × 1, Button sticker.

[NOTE] Batteries are not included in the package. Please use 3 x AAA batteries.

size: 69.2 × 69.2 × 17 mm

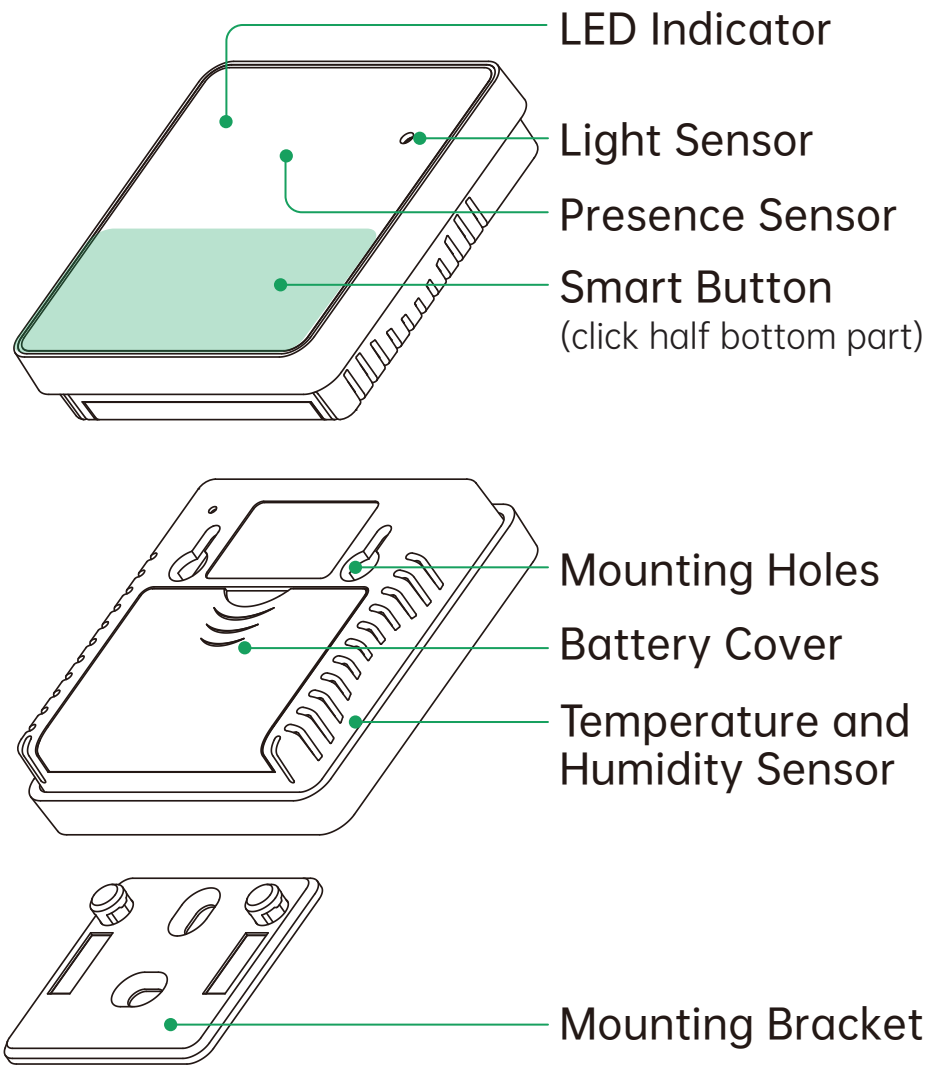

• LED Indications

Status	Indication	How to enter / trigger
Stays on for 1 minute, then turns off	Entering Bluetooth mode	Press and hold button for 10s
Flashing for 1 minute, then off	Entering Zigbee mode	Press and hold button for 15s
LED Off	Exit pairing mode	Device paired or exit pairing mode in 1 min
Flashes Once	Sending data	/

• Switching Modes

Press and hold the button as instructed above to switch modes.

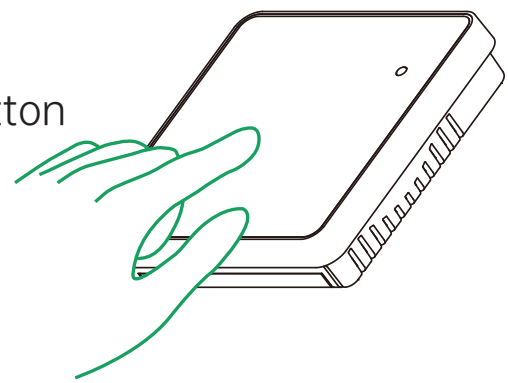

NOTE

- Zigbee pairing must be completed within 1 minute while the indicator is flashing. Bluetooth pairing can be performed at any time in this mode.

2 INSTALLATION STEPS

STEP 1 Get the App

- Scan the above QR code or search and download "LinknLink" App from the App Store or Google Pay.

STEP 2 Sign up or sign in

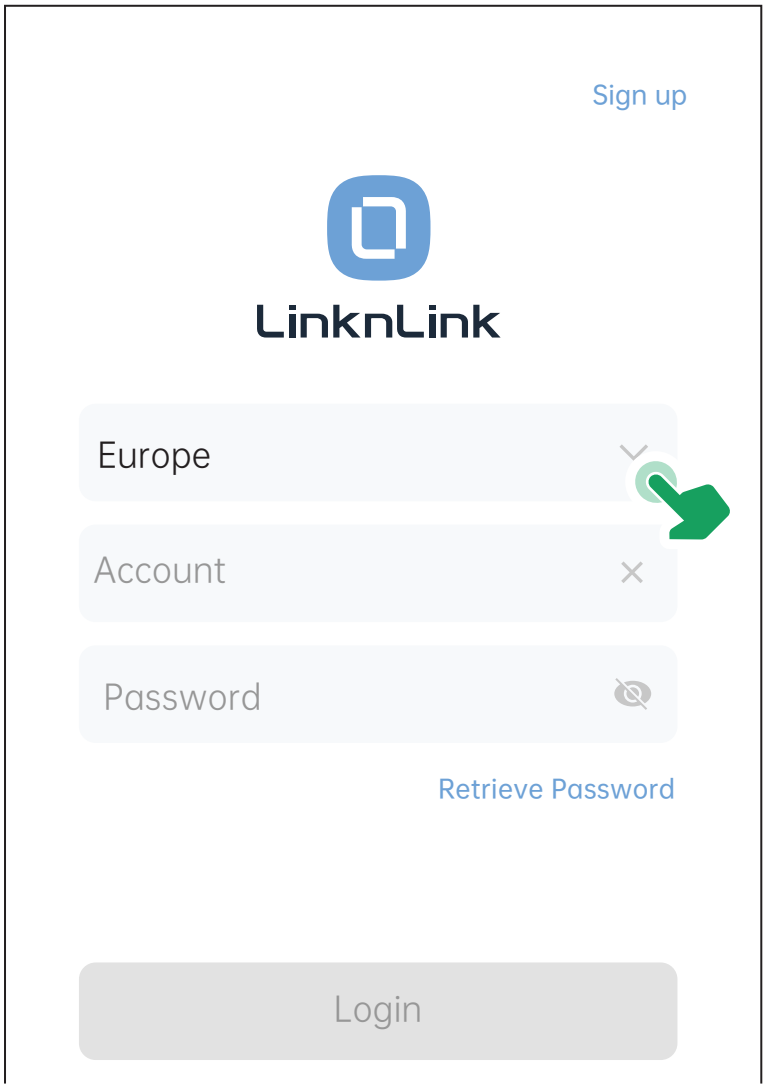

- Open the LinknLink App and tap **Sign up** to create an account.
- If you already have an account, select the server from the top right corner and choose **LinknLink Account**.

STEP 3 Discover the device

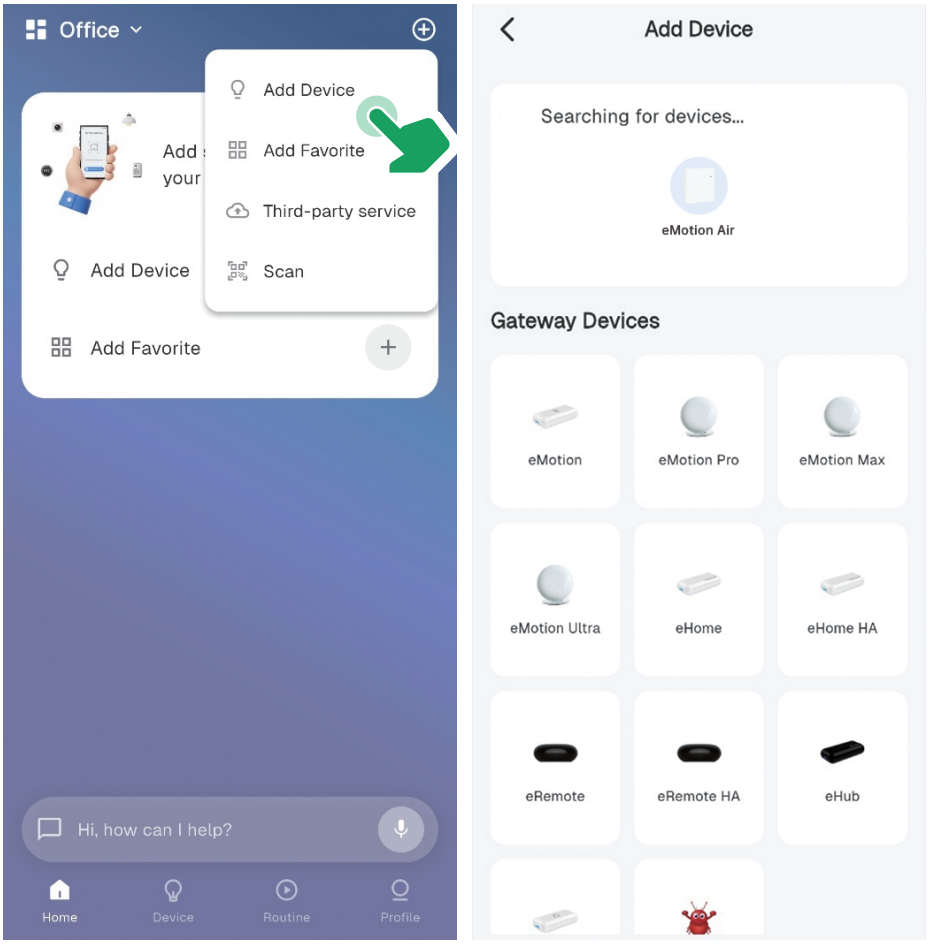

- Make sure eMotion Air is in Bluetooth mode.
- Tap **Add Device**;
- The app will search nearby Bluetooth devices and show the device icon and name.

STEP 4 Add the device

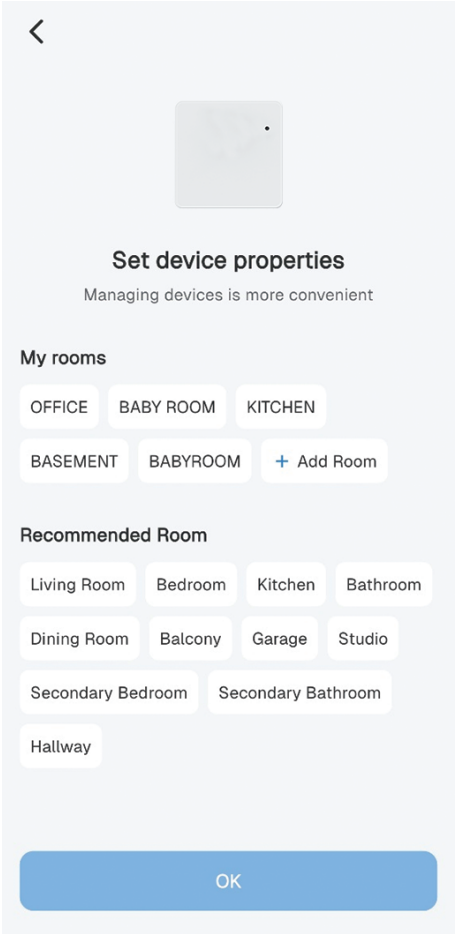

- Tap the device icon, select a room, rename the device if needed, and finish adding it to the app.

STEP 5 Bind with a hub

- If you also have a configured LinknLink Bluetooth hub (e.g., eMotion Ultra) nearby, the Bluetooth hub will automatically find the eMotion Air and add it to management, allowing your eMotion Air to support remote access and be synced to Alexa/Google Home.

3 PAIR IN HOME ASSISTANT

OPTION 1 Pair with Bluetooth

- Make sure your Home Assistant server has a Bluetooth radio.
- Put eMotion Air into Bluetooth mode. In Home Assistant, go to **Settings > Devices & services**.
- The device will appear under the **Integrations** tab.
- Click **Add** to add it into Home Assistan

OPTION 2 Pair with Zigbee

- Make sure you have a Zigbee 3.0 stick set up in Home Assistant with the Zigbee Home Automation (ZHA) integration.
- Put eMotion Air into Zigbee pairing mode (LED flashes repeatedly).
- Open the ZHA integration and click Add device.
- Home Assistant will discover and configure eMotion Air for use.

NOTE

- Device setup must be completed in the LinknLink App.

4 USE DEVICE IN AUTOMATIONS

- All sensors (presence, illuminance, temperature, humidity and button events) are exposed for automations. You can use the sensors as triggers in these platforms:
  ① Creating Automations in Home Assistant directly with the device (Bluetooth radio or Zigbee stick is needed on HA)
  ② Creating Automations in Google Home (hub is required)
  ③ Creating Routines in Alexa (hub is required)

LinknLink