## User Manual MINI-2GS (EN)



2-Gang Matter Over WiFi Smart Switch

### Introduction

The MINI DUO (Matter over Wi-Fi) is an ultra-compact dual-channel smart switch designed to fit neatly inside standard mounting boxes. Supporting a total load of up to 16A, it transforms traditional switches into smart switches. With Matter protocol support, it integrates seamlessly with smart devices from other brands, empowering you to build a personalized and unified home automation system.









Remote Control

Voice Control

Timer Schedule

Power-on State









Support Matter

Smart Scene

Share Device

**Group Control** 



- Press and hold for 5 seconds: Device enters the pairing mode. (Pairing time 10 minutes)
- Click three times in succession: Switch external switch type.

#### 2 LED indicator (Blue)

#### eWeLink Mode

- Flashes two short and one long: Device is in pairing mode.
- Keeps on: Device is online.
- Flashes once: Offline
- Flashes twice: Device is connected to the router but not to the cloud.

#### Matter Mode

- Flashes two short and one long: Device is in pairing mode.
- Keeps on: Device is online.
- Flashes once: Offline

## **Platform Certification**





## Specification

|--|


Product series	MINI Extreme series
Product type	2-Gang Matter Over WiFi Smart Switch
Model	MINI-2GS
MCU	ESP32-C3FH4X
Rating	110-240V~ 50/60Hz 10A/gang, Total 16A MAX Resistive load-☆-µ
Wi-Fi	IEEE 802.11b/g/n 2.4GHz
Net weight	36.5g
Product dimension	45x39.4x16.8mm
Color	White
Casing material	PC
Diameter of wiring (recommend)	16AWG to 14AWG SOL/STR copper conductor only
Applicable place	Indoor
Working temperature	10T40 (-10°C~40°C)
Working humidity	5-95%RH, non-condensing
Certification	CE/FCC/RoHS

## Installation

## 1. Power off

ITEAD - 黎业军(2602432)



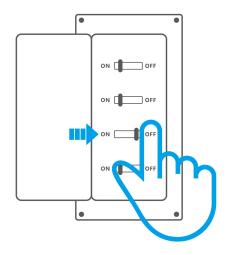




#### WARNING


Please install and maintain the device by a professional electrician. To avoid electric shock hazards, do not operate any connection or contact the terminal connector while the device is powered on!

### 2. Wiring instruction

- (!) To ensure the safety of your electrical installation, it's essential that either a Miniature Circuit Breaker (MCB) or a Residual Current operated Circuit-breaker with Integral Overcurrent protection (RCBO) with an electrical rating of 16A has been installed before the MINI-2GS.
- (!) For single-phase use only (110-240V~). Connecting to multiple phases may result in ITEAD - 黎业军(2602432) damage to the device.
- (!) Make sure all wires are connected correctly.



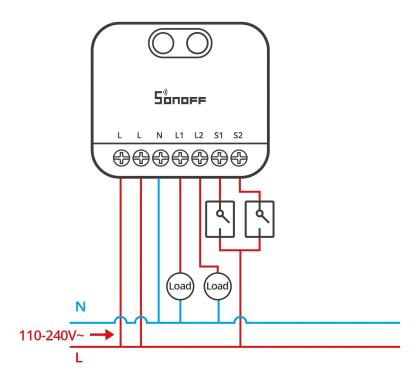

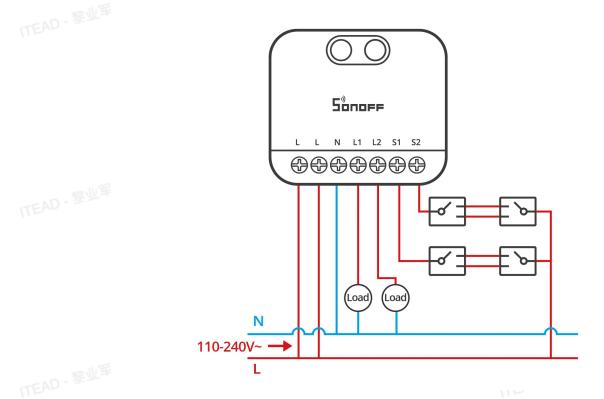

- (!) It is prohibited to connect S1 and S2 terminals to the neutral or ground wire, in order to avoid damaging the equipment and causing danger.
- ① Supported switches include rocker switches and push buttons, and factory default is the rocker switch. **Method of changing the switch type:** short press the button 3 times


until the LED signal indicator flashes 3 times quickly, now you change the switch type successfully.

#### Instructions for wiring symbols

Terminals		Wires	
L	Live Terminal	L	Live Line (110-240V~)
N	Neutral Terminal	N	Neutral Line
L1	Live Output Terminal_1 (110-240V~)		
L2	Live Output Terminal_2 (110-240V~)		
S1	Switch_1		
S2	Switch_2		

#### 3. Power on

When the device is used for the first time, it will enter pairing mode by default after being powered on. At this time, the LED indicator will flash in a pattern of "two short and one long".

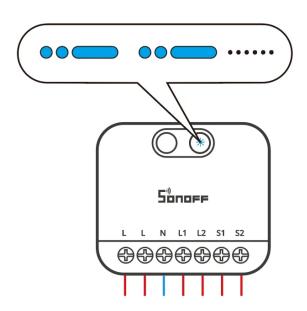

6

• The device will exit the Pairing Mode if not paired within 10mins. If you want to enter this mode, please long-press the button for about 5s until the LED indicator changes in a cycle of two short and one long flash and release.

## Matter Ecosystem User Guide

Open a Matter-compatible App to scan the Matter QR code on the Quick Guide or the device itself to add the device.



Add to Apple via

Matter



Add to Google via

Matter



Add to Alexa via Matter



Add to SmartThings via Matter

## eWeLink Ecosystem User Guide


### 1 Download the eWeLink App

Please download the "eWeLink" App from Google Play Store or Apple App Store.







2 Add Device

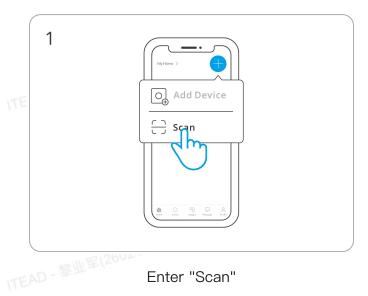


Enter "Scan"

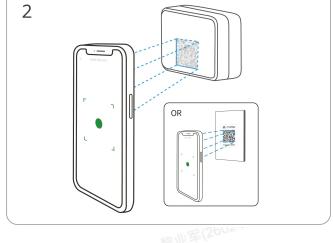

Scan the QR code on the quick guide or the device

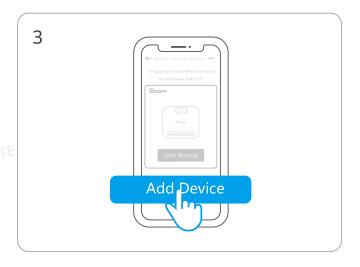


Select "Add Device"

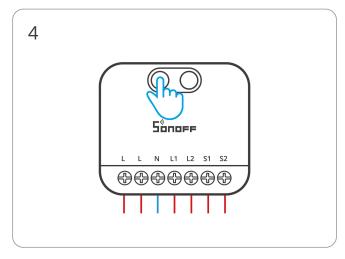

(If the device exits pairing mode)

Long press the button for 5 seconds

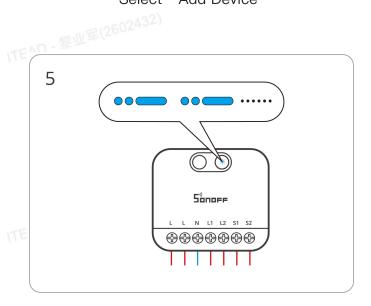



Check LED indicator flashing status

6 >

Search for the device and start connecting

(Two short and one long)

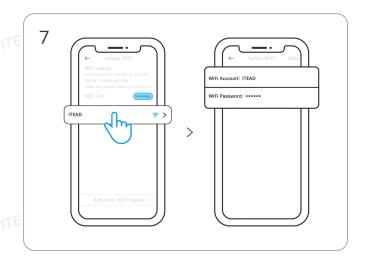


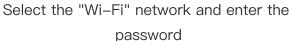



Device "Added completely"

## Install the device in the mounting box

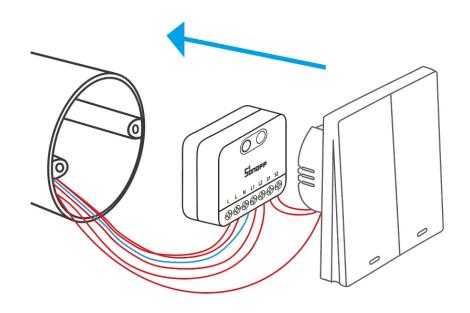

## **Factory Reset**

Trigger conditions (any one condition met)

- Delete the device on eWeLink App.
- The device that has been successfully paired can be paired again with another eWeLink account to add it.

• Press and hold the device button for 10 seconds.

## FCC compliance statement

Responsible Party Name: SONOFF TECHNOLOGY LLC

Address: 14777 NE 40th St, Suite 201 Bellevue, WA 98007

Email Address: usres@itead.cc FCC ID: 2APN5-MINI2GS

- 1. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
  - 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - —Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## **EU Declaration of Conformity**

Hereby, Shenzhen Sonoff Technologies Co., Ltd. declares that the radio equipment type MINI-2GS is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://sonoff.tech/compliance/

## For CE Frequency

#### **EU Operating Frequency Range:**

Wi-Fi: 802.11 b/g/n20 2412-2472 MHz, 802.11 n40: 2422-2462 MHz

BLE: 2402-2480 MHz

#### **EU Output Power:**

Wi-Fi 2.4G≤20dBm

BLE≤10dBm

Under normal use of condition, this equipment should be kept a separation distance of at least 20 cm between the antenna and the body of the user.

# WEEE Disposal and Recycling Information



WEEE Disposal and Recycling Information All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

5	Scatola	Manuale			
E	PAP 21	PAP 22			
(	Carta	Carta			
F	RACCOLTA DIFFERENZIATA				
١	Verifica le disposizioni del tuo Comune.				
5	Separa le componenti e conferiscile in modo corretto.				



Manufacturer: Shenzhen Sonoff Technologies Co., Ltd.

ITEAD - 黎业军(2602432) Address: 3F & 6F, Bldg A, No. 663, Bulong Rd, Shenzhen, Guangdong, 518000, China

Service email: support@itead.cc Website: sonoff.tech

Made in China



Points de collecte sur www.quefairedemesdechets.fr Privilégiez la réparation ou le don de votre appareil!











